


Air conditioner

Installation manual

AJ****TXJ*CH

- Thank you for purchasing this Samsung air conditioner.
- Before operating this unit, please read this manual carefully and retain it for future reference.

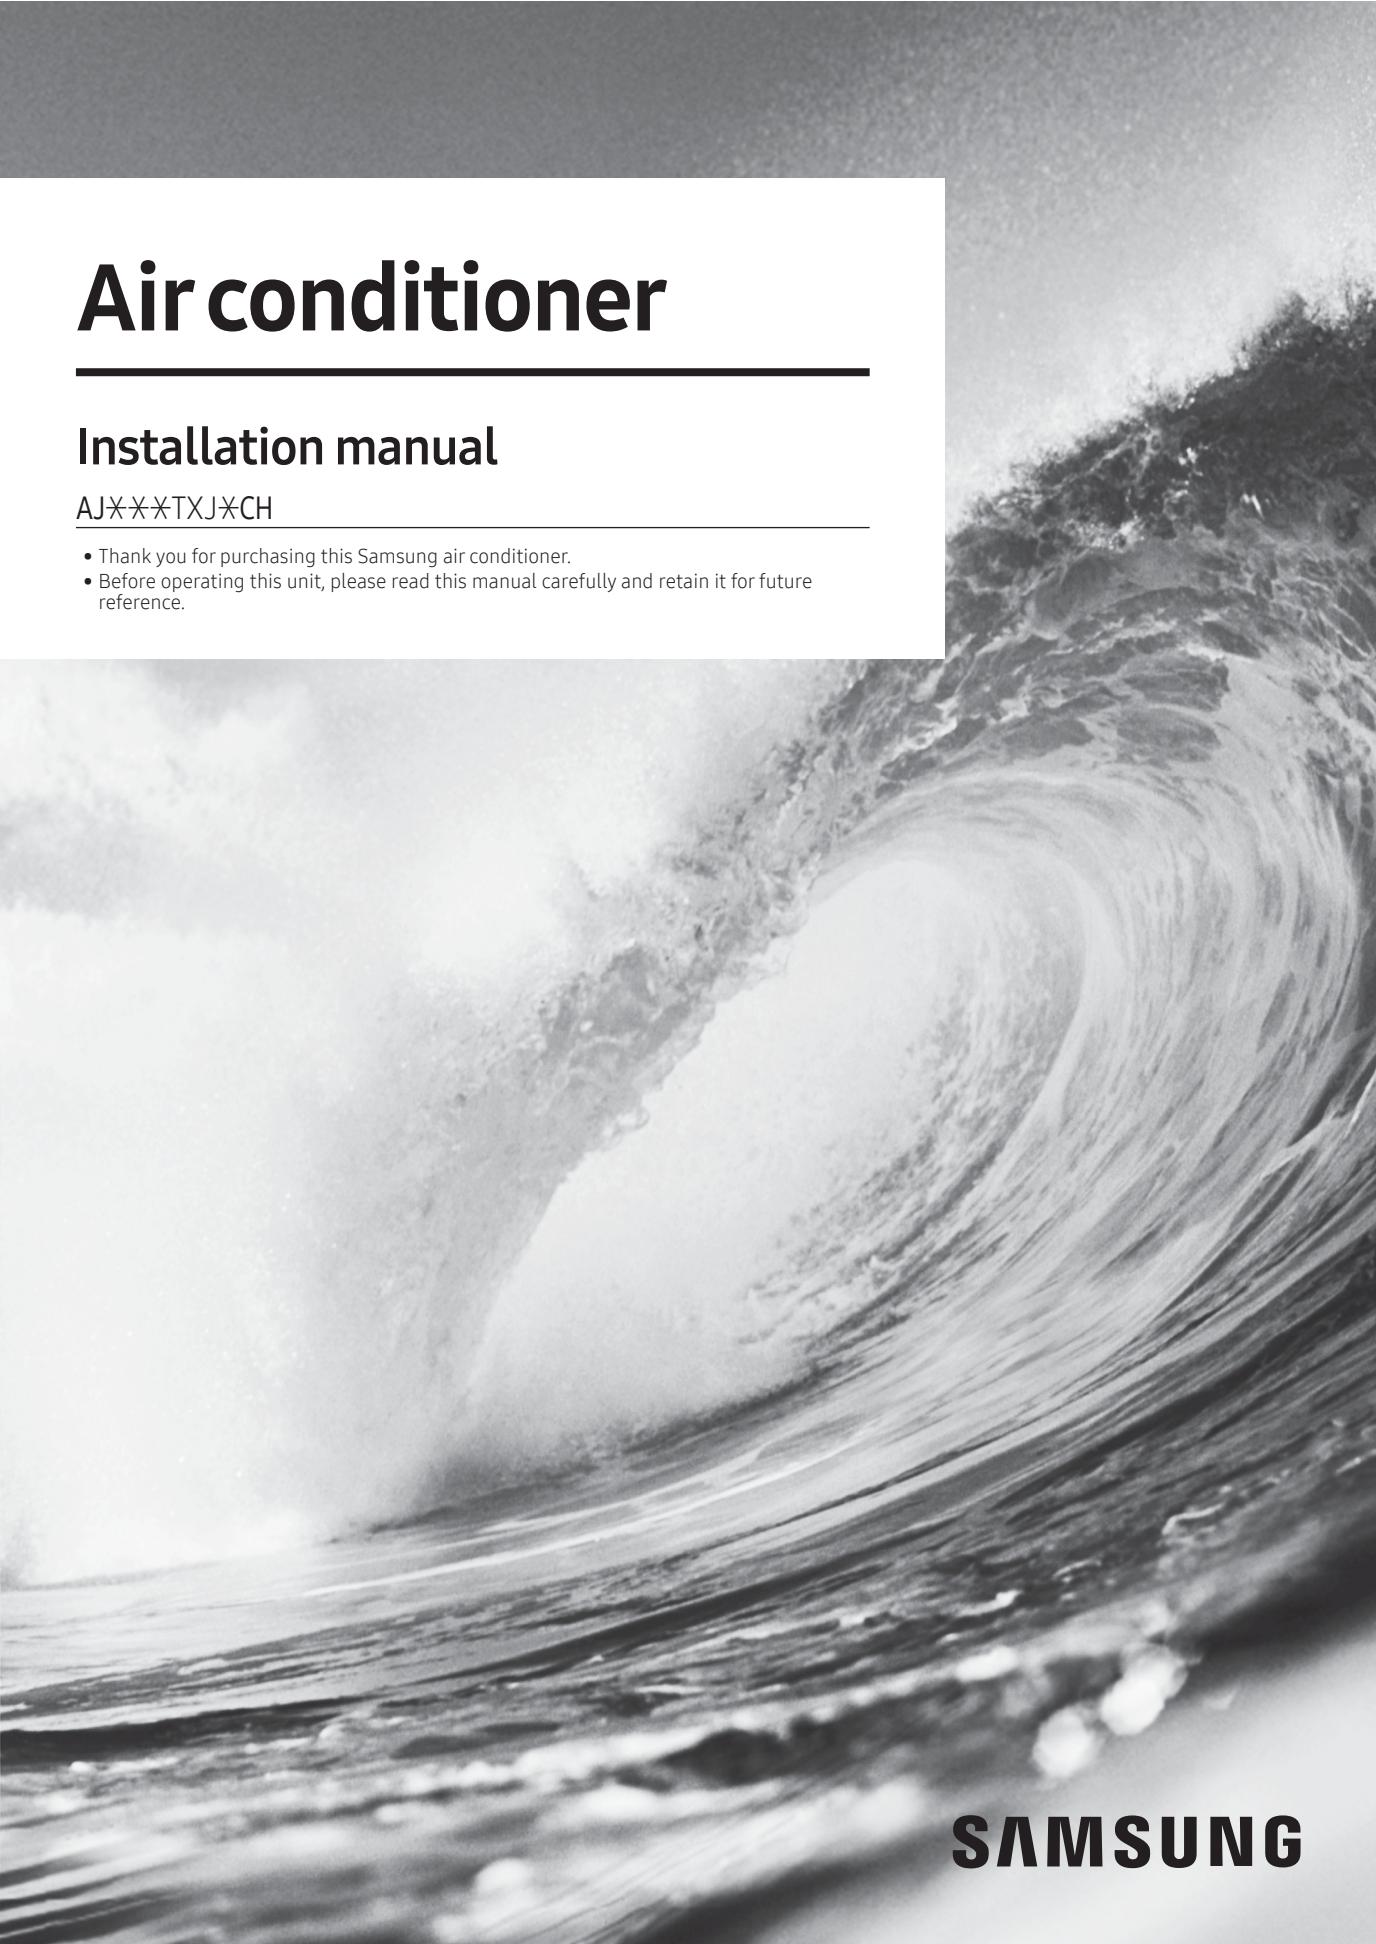

SAMSUNG

Contents

| | |
|--|-----------|
| Safety Information | 3 |
| General information | 3 |
| Installing the unit | 4 |
| Power supply line, fuse or circuit breaker | 4 |
| Installation Procedure | 5 |
| Step 1 Choosing the installation location | 5 |
| Step 2 Checking and preparing accessories and tools | 7 |
| Step 3 Fixing the outdoor unit in place | 7 |
| Step 4 Connecting the power cables, communication cable, and controllers | 8 |
| Step 5 Optional: Extending the power cable | 13 |
| Step 6 Connecting the refrigerant pipe | 15 |
| Step 7 Optional: Cutting and flaring the pipes | 16 |
| Step 8 Connecting up and removing air in the circuit | 17 |
| Step 9 Performing the gas leak test | 18 |
| Step 10 Adding refrigerant (R-410A) | 18 |
| Step 11 Connecting the drain hose to the outdoor unit | 19 |
| Step 12 Checking the earthing | 19 |
| Step 13 Setting an indoor unit address and installation option | 20 |
| Step 14 Cool and Heat modes operation test | 28 |
| Step 15 Optional: Setting to Cool or Heat only mode | 28 |
| Step 16 Optional: Power improvement mode | 29 |
| Extra procedures | 30 |
| Pumping down refrigerant | 30 |
| Relocating the indoor and outdoor units | 30 |
| Using the stop valve | 30 |
| Appendix | 32 |
| Troubleshooting | 32 |

IMPORTANT – This product has been designed and manufactured to meet ENERGY STAR criteria for energy efficiency when matched with appropriate coil components. However, proper refrigerant charge and proper air flow are critical to achieve rated capacity and efficiency. Installation of this product should follow the manufacturer's refrigerant charging and air flow instructions. Failure to confirm proper charge and airflow may reduce energy efficiency and shorten equipment life.

Safety Information

WARNING

- Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

WARNING

- Hazards or unsafe practices that may result in severe personal injury or death.

CAUTION

- Hazards or unsafe practices that may result in minor personal injury or property damage.

Carefully follow the precautions listed below because they are essential to guarantee the safety of the equipment.

WARNING

- Always disconnect the air conditioner from the power supply before servicing it or accessing its internal components.
- Verify that installation and testing operations are performed by qualified personnel.
- Verify that the air conditioner is not installed in an easily accessible area.

General information

WARNING

- Carefully read the content of this manual before installing the air conditioner and store the manual in a safe place in order to be able to use it as reference after installation.
- For maximum safety, installers should always carefully read the following warnings.
- Store the operation and installation manual in a safe location and remember to hand it over to the new owner if the air conditioner is sold or transferred.
- This manual explains how to install an indoor unit with a split system with two SAMSUNG units. The use of other types of units with different control systems may damage the units and invalidate the warranty. The manufacturer shall not be responsible for damages arising from the use of non compliant units.

- The manufacturer shall not be responsible for damage originating from unauthorized changes or the improper connection of electric and requirements set forth in the "Operating limits" table, included in the manual, shall immediately invalidate the warranty.
- The air conditioner should be used only for the applications for which it has been designed: the indoor unit is not suitable to be installed in areas used for laundry.
- Do not use the units if damaged. If problems occur, switch the unit off and disconnect it from the power supply.
- In order to prevent electric shocks, fires or injuries, always stop the unit, disable the protection switch and contact SAMSUNG's technical support if the unit produces smoke, if the power cable is hot or damaged or if the unit is very noisy.
- Always remember to inspect the unit, electric connections, refrigerant tubes and protections regularly. These operations should be performed by qualified personnel only.
- The unit contains moving parts, which should always be kept out of the reach of children.
- Do not attempt to repair, move, alter or reinstall the unit. If performed by unauthorized personnel, these operations may cause electric shocks or fires.
- Do not place containers with liquids or other objects on the unit.
- All the materials used for the manufacture and packaging of the air conditioner are recyclable.
- The packing material and exhaust batteries of the remote controller(optional) must be disposed of in accordance with current laws.
- The air conditioner contains a refrigerant that has to be disposed of as special waste. At the end of its life cycle, the air conditioner must be disposed of in authorized centers or returned to the retailer so that it can be disposed of correctly and safely.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Contents

Installing the unit

WARNING

IMPORTANT: When installing the unit, always remember to connect first the refrigerant tubes, then the electrical lines.

- Upon receipt, inspect the product to verify that it has not been damaged during transport. If the product appears damaged, DO NOT INSTALL it and immediately report the damage to the carrier or retailer (if the installer or the authorized technician has collected the material from the retailer.)
- After completing the installation, always carry out a functional test and provide the instructions on how to operate the air conditioner to the user.
- Do not use the air conditioner in environments with hazardous substances or close to equipment that release free flames to avoid the occurrence of fires, explosions or injuries.
- Our units should be installed in compliance with the spaces shown in the installation manual, to ensure accessibility from both sides and allow repairs or maintenance operations to be carried out. The unit's components should be accessible and easy to disassemble without endangering people and objects.
- For this reason, when provisions of the installation manual are not complied with, the cost required to access and repair the units (in **SAFETY CONDITIONS**, as set out in prevailing regulations) with harnesses, ladders, scaffolding or any other elevation system will NOT be considered part of the warranty and will be charged to the end customer.

Power supply line, fuse or circuit breaker

WARNING


- Always make sure that the power supply is compliant with current safety standards. Always install the air conditioner in compliance with current local safety standards.
- Always verify that a suitable earthing connection is available.
- Verify that the voltage and frequency of the power supply comply with the specifications and that the installed power is sufficient to ensure the operation of any other domestic appliance connected to the same electric lines.
- Always verify that the cut-off and protection switches are suitably dimensioned.
- Verify that the air conditioner is connected to the power supply in accordance with the instructions provided in the wiring diagram included in the manual.
- Always verify that electric connections (cable entry, section of leads, protections...) are compliant with the electric specifications and with the instructions provided in the wiring scheme. Always verify that all connections comply with the standards applicable to the installation of air conditioners.
- Devices disconnected from the power supply should be completely disconnected in the condition of overvoltage category.
- Be sure not to perform power cable modification, extension wiring, and multiple wire connection.
 - It may cause electric shock or fire due to poor connection, poor insulation, or current limit override.
 - When extension wiring is required due to power line damage, refer to "Step 5 Optional: Extending the power cable" in the installation manual.

Installation Procedure

Step 1 Choosing the installation location

Installation location requirements


- Do not place the outdoor unit on its side or upside down. Failing to do so may cause the compressor lubrication oil to run into the cooling circuit and lead to a serious damage to the unit.
- Install the unit in a well-ventilated location away from direct sunlight or strong winds.
- Install the unit in a location that would not obstruct any passageways or thoroughfares.
- Install the unit in a location that would not inconvenience or disturb your neighbors, as they could be affected by the noise or the airflow coming from the unit.
- Install the unit in a location where the pipes and the cables can be easily connected to the indoor unit.
- Install the unit on a flat, stable surface that can withstand the weight of the unit. Otherwise, the unit can generate noise and vibration during operation.
- Install the unit so that the air flow is directed towards the open area.
- Maintain sufficient clearance around the outdoor unit, especially from a radio, computer, stereo system, etc.

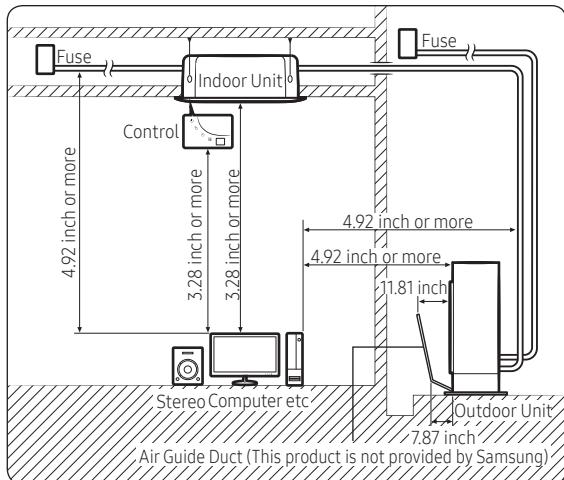


- Install the unit at a height where its base can be firmly fixed in place.
- Make sure that the water dripping from the drain hose runs away correctly and safely.

CAUTION

- You have just purchased a system air conditioner and it has been installed by your installation specialist.
- This device must be installed according to the national electrical rules.
- If your outdoor unit exceeds a net weight of 132.2 lb, do not install it on a suspended wall, but stand it on a floor.
- The reliability of our product cannot be guaranteed under conditions of -13°F or less.
- When installing the outdoor unit at the seaside, make sure that it is not directly exposed to sea breeze. If you cannot find an adequate place free from direct sea breeze, construct a protection wall or a protective fence.
 - Install the outdoor unit in a place (such as near buildings etc.) where it can be prevented from sea breeze. Failure to do so may cause a damage to the outdoor unit.

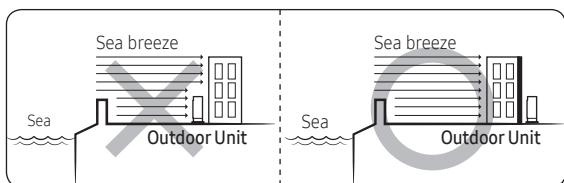

- If you cannot avoid installing the outdoor unit at the seaside, construct a protection wall around to block the sea breeze.
- Construct a protection wall with a solid material such as concrete to block the sea breeze. Make sure that the height and the width of the wall are 1.5 times larger than the size of the outdoor unit. Also, secure a space larger than 27.6 inch between the protection wall and the outdoor unit for exhausted air to ventilate.

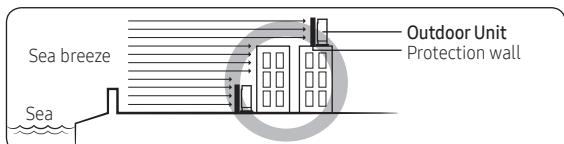

CAUTION

- Depending on the condition of power supply, unstable power or voltage may cause malfunction of the parts or control system. (At the ship or places using power supply from electric generator...etc)


Installation Procedure

- Install the unit in a place where water can drain smoothly.
- If you have any difficulty finding installation location as prescribed above, contact your manufacturer for details.
- Be sure to clean the sea water and the dust on the heat exchanger of the outdoor unit and apply a corrosion inhibitor on it. (At least once in a year.)

Minimum clearances for the outdoor unit


When installing 1 outdoor unit

(Unit : inch)

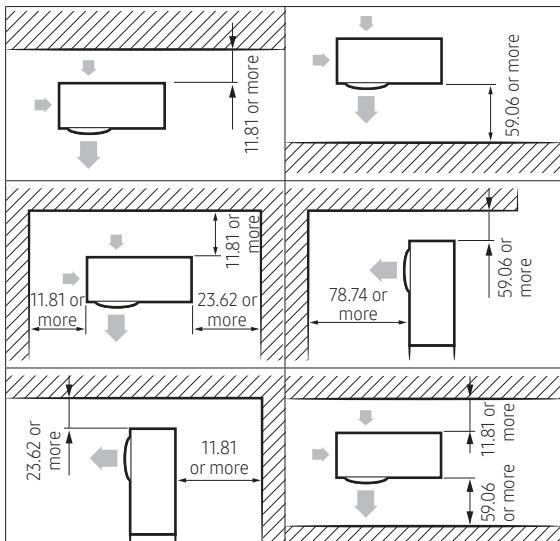

When installing more than 1 outdoor unit

(Unit : inch)

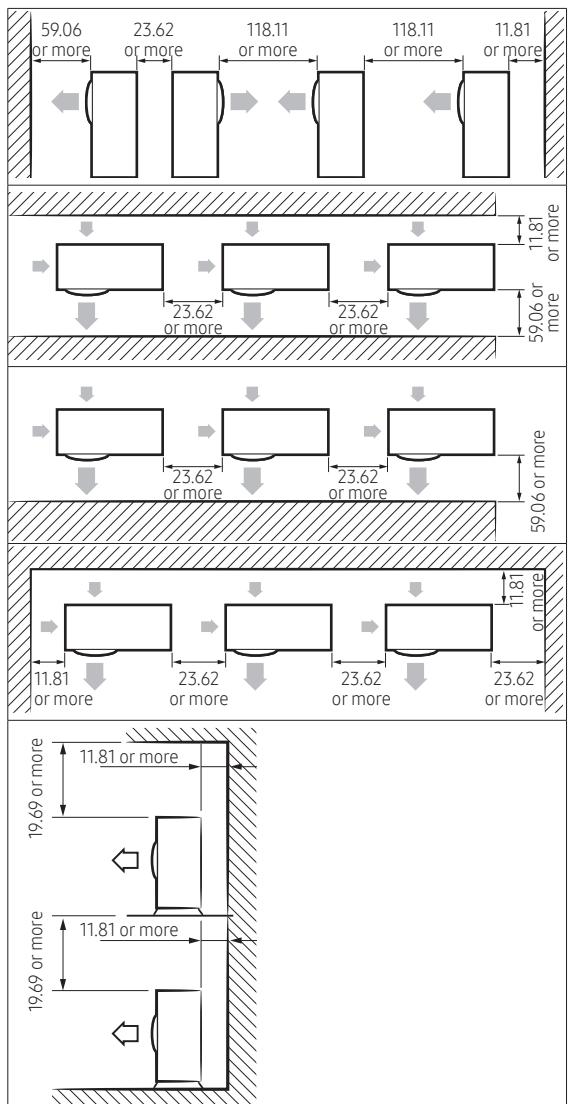

CAUTION

- The outdoor unit must be installed according to the specified distances in order to permit accessibility from each side, to guarantee correct operation, maintenance, and repair of the unit. The components of the outdoor unit must be reachable and removable under safe conditions for people and the unit.

Step 2 Checking and preparing accessories and tools

| 3-wire Power Cable (option) | 2-wire Assembly Cable (option) |
|---|---|
|  |  |
| Drain Plug | Energy Label |
|  |  |
| Rubber Leg | Installation Manual |
|  |  |
| Flare Nuts, 3/8 inch outer pipe diameter | Flare Bolt (Nut 1/2inch); Bolt (3/8 inch) |
|  |  |

NOTE

- Attach Energy Label to the outdoor unit properly when installing.
- Wire assembly cables are optional. If they are not supplied, use standard cables.
- The drain plug and the rubber legs are included only when the air conditioner is supplied without assembly pipes.
- If these accessories are supplied, they are in the accessory package or outdoor unit package.


Step 3 Fixing the outdoor unit in place

Install the outdoor unit on a rigid and stable base to prevent disturbance from any noise caused by vibration. When installing the unit at a height or in a location exposed to strong winds, fix the unit securely to a support (i.e., a wall or a ground).

- 1 Position the outdoor unit so that the air flow is directed towards the outside, as indicated by the arrows on the top of the unit.
- 2 Attach the outdoor unit to the appropriate support using anchor bolts.
 - The earthing wire for the telephone line cannot be used to earth the air conditioner.
- 3 If the outdoor unit is exposed to strong winds, install shield plates around the outdoor unit, so that the fan can operate correctly.

NOTE

- Install provided rubber legs to prevent vibration and noise.

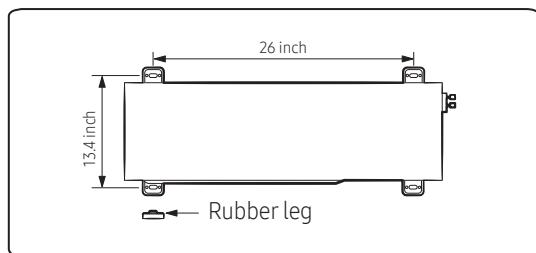


CAUTION

- Install a drain outlet at the lowest end around the base for outdoor unit drainage
- When installing the outdoor unit on the roof, waterproof the unit and check the ceiling strength.

Installation Procedure

Optional: Fixing the outdoor unit to a wall with a rack

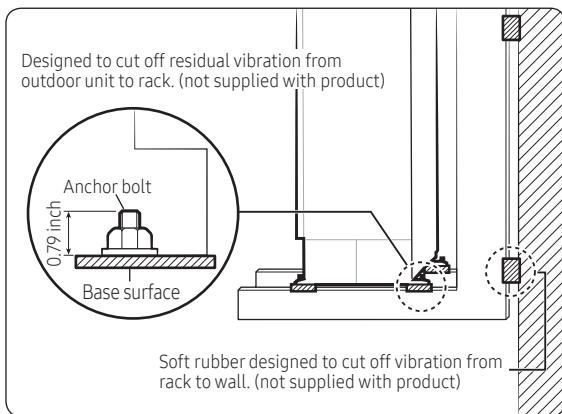

- Install a proper grommet in order to reduce noise and residual vibration transferred by the outdoor unit towards the wall.

CAUTION

- When installing an air guide duct, be sure to check the following:
 - The screws do not damage the copper pipe.
 - The air guide duct is fixed firmly on the guard fan.

Step 4 Connecting the power cables, communication cable, and controllers

You must connect the following three electrical cables to the outdoor unit:

- The main power cable between the auxiliary circuit breaker and the outdoor unit.
- The outdoor-to-indoor power cable between the outdoor unit and the indoor unit.
- The communication cable between the outdoor unit and the indoor unit.

CAUTION

- During installation, make first the refrigerant connections and then the electrical connections. If the unit is uninstalled, first disconnect the electrical cables and then the refrigerant connections.
- Connect the air conditioner to the earthing system before making the electrical connections.

NOTE


- Especially, if your outdoor unit is the one designed for Russian and European markets, consult the supply authority, if necessary, to estimate and reduce the supply system impedance before installation.

Connecting cables through conduits for protection


When connecting cables between the indoor unit and the outdoor unit, use conduits to protect the cables.

- AJ020TXJ2CH / AJ024TXJ3CH

- 1 Remove the conduit plate from the product.

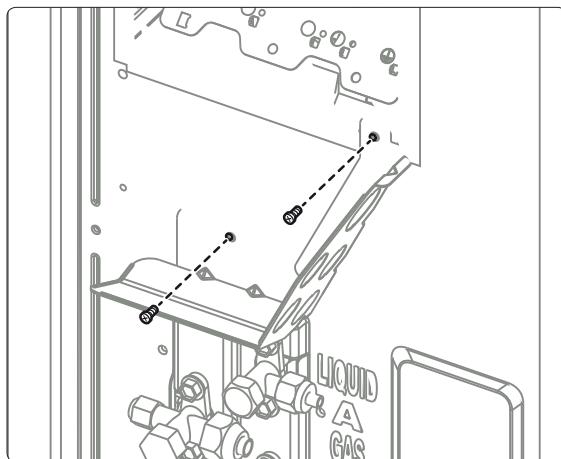


- 2 Drill holes on the conduit plate in accordance with their use and quantity.

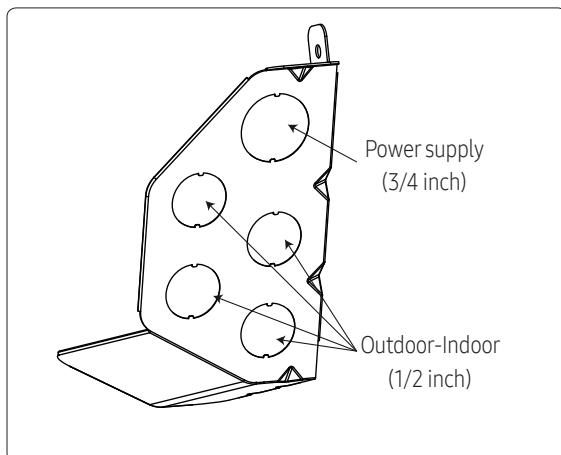

- 3 Insert the cables through the conduits, and then fix the conduits to the conduit plate with the lock nuts.

-Apply silicon to the end of the hose to prevent rainwater from entering it.

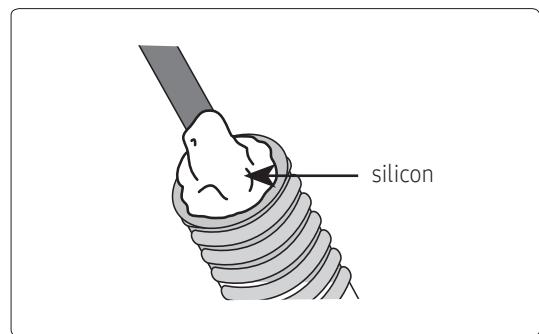


- 4 Connect the cables to the outdoor units.
For how to connect the cables, refer to the next page.
- 5 Attach the conduit plate to the product.


Installation Procedure

Connecting the cables to the outdoor unit

◆ AJ020TXJ2CH

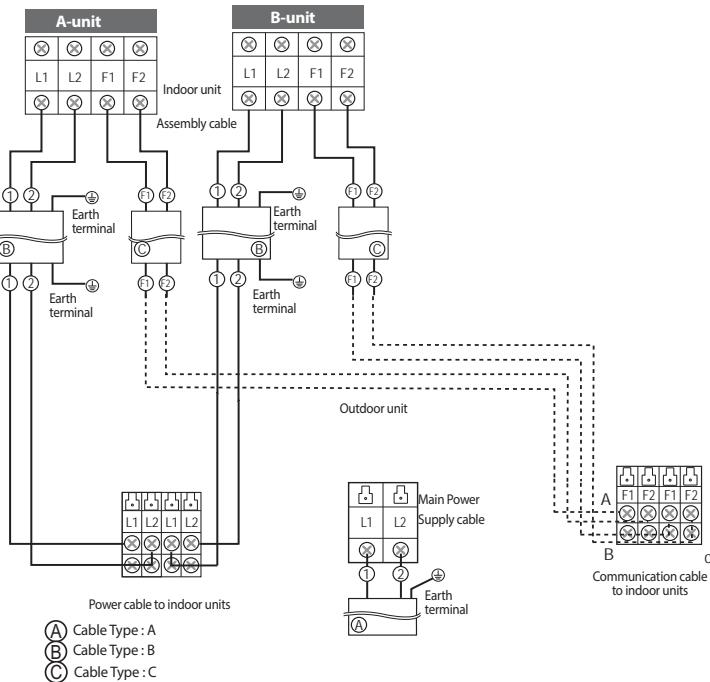

◆ AJ024TXJ3CH

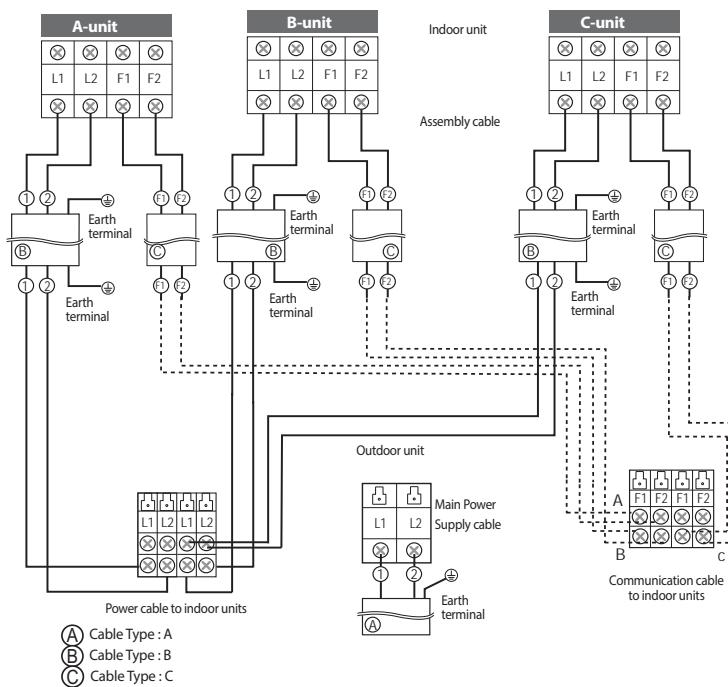

Specification for circuit breaker and power supply cord

- Power supply cord is not supplied with air conditioner.
- Select the power supply cord in accordance with relevant local and national regulations.
- Wire size must comply with the applicable local and national code.
- Specifications for local wiring power supply cord and branch wiring are in compliance with local cord.

The specification for cables

| Model | Main Power Supply Cable | | Indoor Power Supply Cable | | Communication Cable | | FUSE | MCCB | Type GL |
|-------------|--|------|---|------|---|------|------|---------------------------|---------|
| | Specification | Type | Specification | Type | Specification | Type | | | |
| AJ020TXJ2CH | 3G, 0.0039inch ² or more, H07RN-F | A | 3G, 0.0023 to 0.0039 inch ² or more, H07RN-F | B | 2G, 0.0012 to 0.0023 inch ² or more, H07RN-F | C | 20A | Frame : 30A Trip : 20A | 20A |
| AJ024TXJ3CH | | | | | | | 25A | Frame : 30A Trip : 25A | 25A |

- Connect the power cable to the auxiliary circuit breaker. If every pole fails to connect to the power supply, it must be incorporated in a wire with a contact opening of ≥ 0.12 inch.

Tightening power terminal


- Connect the cables to the terminal board using the compressed ring terminal.
- Use rated cables only.
- Connect the cables with driver and wrench that can apply the rated torque to the screws.
- Make sure that appropriate tightening torque is applied for cable connection. If the terminal is loose, arc heat may occur and cause fire and if the terminal is connected too firmly, terminal may get damaged.

| Screw | Tighten Torque (lbf·ft) |
|-------|-------------------------|
| M4 | 0.87 ~1.30 |

Transmitter installation(option)

- AJ020TXJ2CH/AJ024TXJ3CH

PCB MAIN - OUT

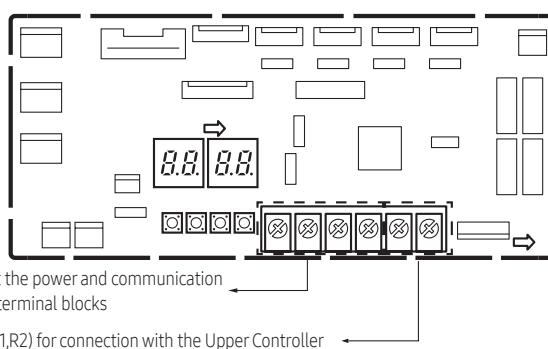


- 1 Turn the power off and take off the cover of the outdoor units.
- 2 Connect R1/R2 lines which are upper controller communication cables referring to upper figure . (Upper controller power should be off.)
- 3 Assemble a cover of the outdoor unit and turn the power on.
- 4 Check the communication status.
- 5 If you install a upper controller to the outdoor unit, every indoor unit which is connected to the outdoor unit can be controlled simultaneously.

Installation Procedure

Outdoor-to-indoor power terminal specifications

- Connect the cables to the terminal board using the compressed ring terminal.
- Cover a solderless ring terminal and a connector part of the power cable and then connect it.

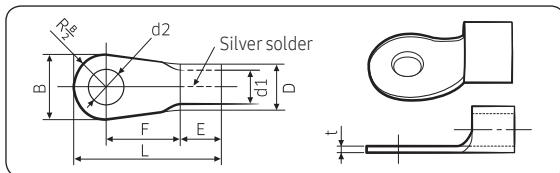

| Nominal dimensions for cable (inch ²) | Nominal dimensions for screw (inch) | B | | D | | d1 | | E | F | L | d2 | | t |
|---|-------------------------------------|---------------------------|------------------|---------------------------|------------------|---------------------------|------------------|-------------|-------------|-------------|---------------------------|------------------|-------------|
| | | Standard dimension (inch) | Allowance (inch) | Standard dimension (inch) | Allowance (inch) | Standard dimension (inch) | Allowance (inch) | Min. (inch) | Min. (inch) | Max. (inch) | Standard dimension (inch) | Allowance (inch) | Min. (inch) |
| 0.002 | 0.15 | 0.260 | ±0.008 | 0.134 | +0.012 -0.008 | 0.067 | ±0.008 | 0.161 | 0.236 | 0.630 | 0.169 | +0.008 0 | 0.028 |
| | | 0.315 | | | | | | | | | | | |
| 0.004 | 0.15 | 0.260 | ±0.008 | 0.165 | +0.012 -0.008 | 0.091 | ±0.008 | 0.236 | 0.236 | 0.689 | 0.169 | +0.008 0 | 0.031 |
| | | 0.335 | | | | | | | | | | | |
| 0.006 | | 0.374 | ±0.008 | 0.220 | +0.012 -0.008 | 0.134 | ±0.008 | 0.236 | 0.197 | 0.787 | 0.169 | +0.008 0 | 0.035 |

- Connect the rated cables only.
- Connect using a driver which is able to apply the rated torque to the screws.
- If the terminal is loose, fire may occur caused by arc. If the terminal is connected too firmly, the terminal may be damaged.

| Tightening torque (lbf·ft) | |
|----------------------------|--------------|
| M4 | 0.87 to 1.30 |
| M5 | 1.45 to 2.17 |


CAUTION

- When connecting cables, you can connect the cables to the electrical part or connect them through the holes below depending on the spot.
- Connect the communication cable between the indoor and outdoor units through a conduit to protect against external forces, and feed the conduit through the wall together with refrigerant piping.
- Remove all burrs at the edge of the knock-out hole and secure the cable to the outdoor knock-out using lining and bushing with an electrical insulation such as rubber and so on.
- Must keep the cable in a protection tube.
- Keep distances of 1.97 inch or more between power cable and communication cable.
- When the cables are connected through the hole, remove the Plate bottom.

Outdoor-to-indoor power and communication cables specifications


| Indoor power supply | | |
|------------------------------------|-------------|-------------------------------------|
| Power supply | Max/Min (V) | Indoor power cable |
| 1Φ, 208-230V~, 60Hz | ±10% | 0.0039 inch ² ↑, 3 wires |
| Communication cable | | |
| 0.0012 to 0.0023 inch ² | | 2 wires |

 - Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord. (Code designation IEC:60245 IEC 57 / CENELEC: H05RN-F)
- When installing the indoor unit in a computer room or network room, use the double shielded (tape aluminum / polyester braid + copper) cable of FROHH2R type.



Step 5 Optional: Extending the power cable

 - Prepare the following tools.


| Tools | Spec | Shape |
|--------------------------|------------------|---|
| Crimping pliers | MH-14 |  |
| Connection sleeve (inch) | 0.79xΦ0.26 (HxD) |  |
| Insulation tape | Width 0.75 inch |  |
| Contraction tube (inch) | 2.76xΦ0.31 (LxD) |  |

- As shown in the figure, peel off the shields from the rubber and wire of the power cable.

- Peel off 0.79 inch of cable shields from the pre-installed tube.

CAUTION

- For information about the power cable specifications for indoor and outdoor units, refer to the installation manual.
- After peeling off cable wires from the pre-installed tube, insert a contraction tube.

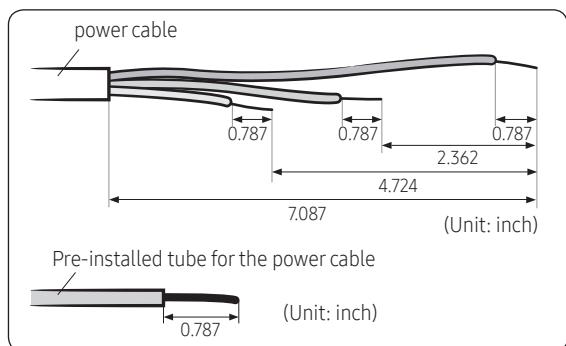


- Insert both sides of core wire of the power cable into the connection sleeve.


- Method 1:** Push the core wire into the sleeve from both sides.
- Method 2:** Twist the wire cores together and push it into the sleeve.

Installation Procedure

 Method 1



Method 2

 


4 Using a crimping tool, compress the two points and flip it over and compress another two points in the same location.

- The compression dimension should be 8.0




- After compressing it, pull both sides of the wire to make sure it is firmly pressed.

Method 1

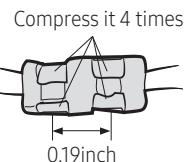

Method 2

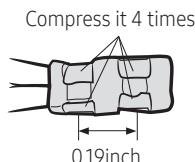


5 Wrap it with the insulation tape twice or more and position your contraction tube in the middle of the insulation tape.

Three or more layers of insulation are required.


Method 1

 Insulation tape



Method 2

 Insulation tape



6 Apply heat to the contraction tube to contract it.

Contraction tube



7 After tube contraction work is completed, wrap it with the insulation tape to finish.



 
Insulation tape

CAUTION

- Make sure that the connection parts are not exposed to outside.
- Be sure to use insulation tape and a contraction tube made of approved reinforced insulating materials that have the same level of withstand voltage with the power cable. (Comply with the local regulations on extensions.)

WARNING

- In case of extending the electric wire, please DO NOT use a round-shaped Pressing socket.
- Incomplete wire connections can cause electric shock or a fire.




Step 6 Connecting the refrigerant pipe

◆ AJ020TXJ2CH


1 Piping outside diameter.

| Indoor unit | Out unit | Power supply \varnothing , V, Hz | Outside diameter | |
|---|-------------|------------------------------------|------------------|------|
| | | | Liquid | Gas |
| **07/09/12/ 007/009/012** AR15** AJ015** | AJ020TXJ2CH | 1,208-230,60 | 1/4" | 3/8" |
| | | | | 1/2" |

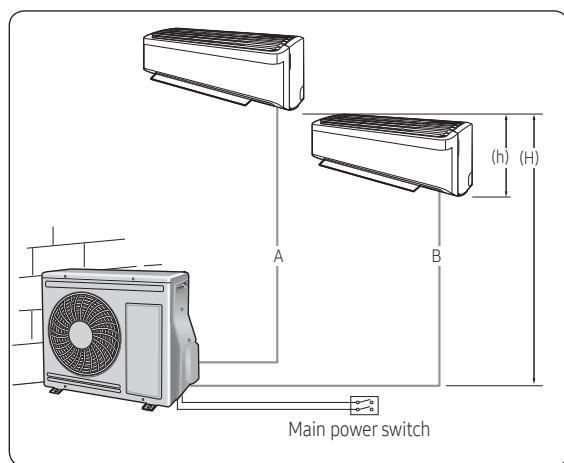

2 Piping length and the height.


| | 1 Room max length | 2 Room total max length | Max height between indoor unit & outdoor unit | Max height between indoor units |
|-------------|-------------------|-------------------------|---|---------------------------------|
| Dimension | 65.6 ft | 98.4 ft | 49.2 ft | 24.6 ft |
| Composition | A,B | A+B | (H) | (h) |

 

◆ AJ024TXJ3CH


1 Piping outside diameter.

| Indoor unit | Out unit | Power supply \varnothing , V, Hz | Outside diameter | |
|---|-------------|------------------------------------|------------------|------|
| | | | Liquid | Gas |
| **07/09/12/ 007/009/012** AR15** AJ015** | AJ024TXJ3CH | 1,208-230,60 | 1/4" | 3/8" |
| **18/018** AJ015** | | | | 1/2" |

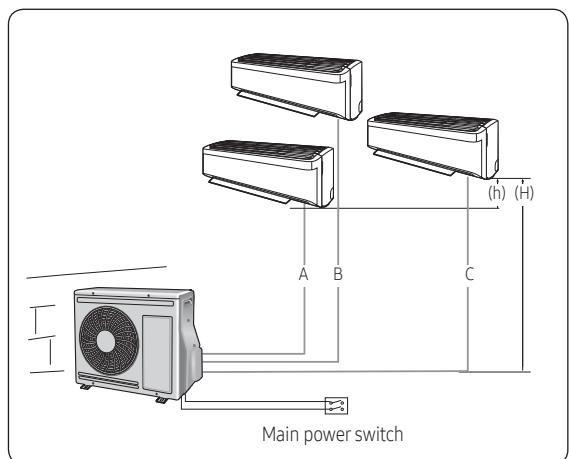

2 Piping length and the height.

| | 1 Room max length | 3 Room total max length | Max height between indoor unit & outdoor unit | Max height between indoor units |
|-------------|-------------------|-------------------------|---|---------------------------------|
| Dimension | 82.0 ft | 229.7 ft | 49.2 ft | 24.6 ft |
| Composition | A,B,C | A+B+C | (H) | (h) |

 

⚠ CAUTION

- 10 ft as minimum pipe length: It will reduce noise and vibration.
- The appearance of the unit may be different from the diagram depending on the model.

⚠ CAUTION

- 10 ft as minimum pipe length: It will reduce noise and vibration.
- The appearance of the unit may be different from the diagram depending on the model.

Installation Procedure

NOTE


You can use the Cool and Heat modes in the following conditions :

| Mode | Cool | Heat |
|---------------------|-----------------|---------------|
| Outdoor temperature | 14°F to 114.8°F | 5°F to 75.2°F |


- It could take maximum 60 minutes to operate for the protection of the compressor, if the outdoor temperature is below 23°F.

Step 7 Optional: Cutting and flaring the pipes

- 1 Make sure that you have the required tools available. (pipe cutter, reamer, flaring tool, and pipe holder)
- 2 If you wish to shorten the pipes, cut it with a pipe cutter, taking care to ensure that the cut edge remains at a 90° angle with the side of the pipe. Refer to the illustrations below for examples of edges cut correctly and incorrectly.

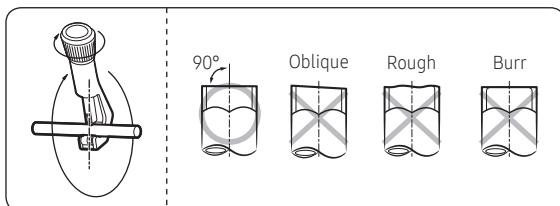


- 3 To prevent any gas from leaking out, remove all burrs at the cut edge of the pipe, using a reamer.
- 4 Slide a flare nut on to the pipe and modify the flare.

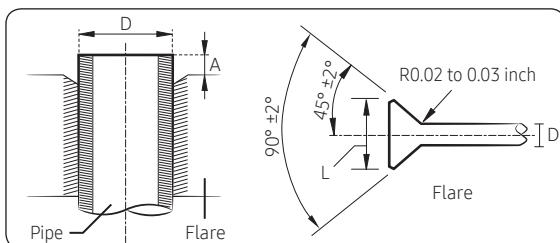

(Unit: inch)

| Outer diameter (D) | Depth (A) | Flare dimension (L) |
|--------------------|--------------|---------------------|
| Φ0.25 | 0.55 to 0.71 | 0.34 to 0.36 |
| Φ0.37 | 1.34 to 1.65 | 0.50 to 0.52 |
| Φ0.50 | 1.93 to 2.40 | 0.64 to 0.65 |
| Φ0.63 | 2.68 to 3.23 | 0.76 to 0.78 |

- 5 Check that the flaring is correct, referring to the illustrations below for examples of incorrect flaring.

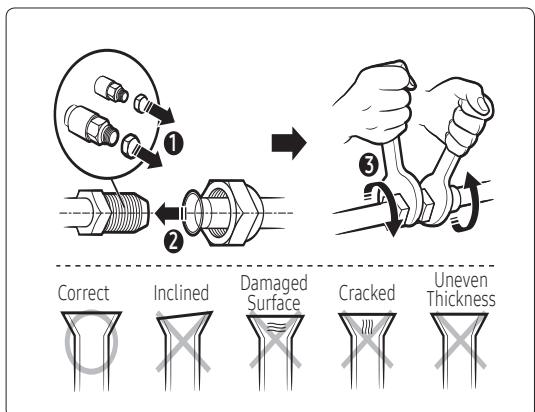

CAUTION

- If the pipes require brazing ensure that OFN (Oxygen Free Nitrogen) is flowing through the system.
- Nitrogen blowing pressure range is 2.9 to 7.3 psi.

Step 8 Connecting up and removing air in the circuit

⚠ WARNING

- When installing, make sure there is no leakage. When recovering the refrigerant, ground the compressor first before removing the connection pipe. If the refrigerant pipe is not properly connected and the compressor works with the service valve open, the pipe inhales the air and it makes the pressure inside of the refrigerant cycle abnormally high. It may cause explosion and injury.

The outdoor unit is loaded with sufficient R-410A refrigerant. Do not vent R-410A into atmosphere: it is a fluorinated greenhouse gas, covered by Kyoto Protocol, with a Global Warming Potential (GWP) = 2088.


You should purge the air in the indoor unit and in the pipe. If air remains in the refrigerant pipes, it affects the compressor. It may cause reduction of cooling capacity and malfunction. Refrigerant for air purging is not charged in the outdoor unit. Use Vacuum Pump as seen in the picture.

- Check the piping connections.
- Connect the charging hose of low pressure side of manifold gauge to the stop valve having a service port.

| Model Name | Valve | |
|-------------|-------|------|
| | 3/8" | 1/2" |
| AJ020TXJ2CH | 1 | 1 |
| AJ024TXJ3CH | 1 | 2 |

⚠ CAUTION

- Make the electrical connection and leave the system into "stand by mode". Do not turn on the system! This is necessary for better vacuum operation (full OPEN position of Electronic Expansion Valve - EEV -).

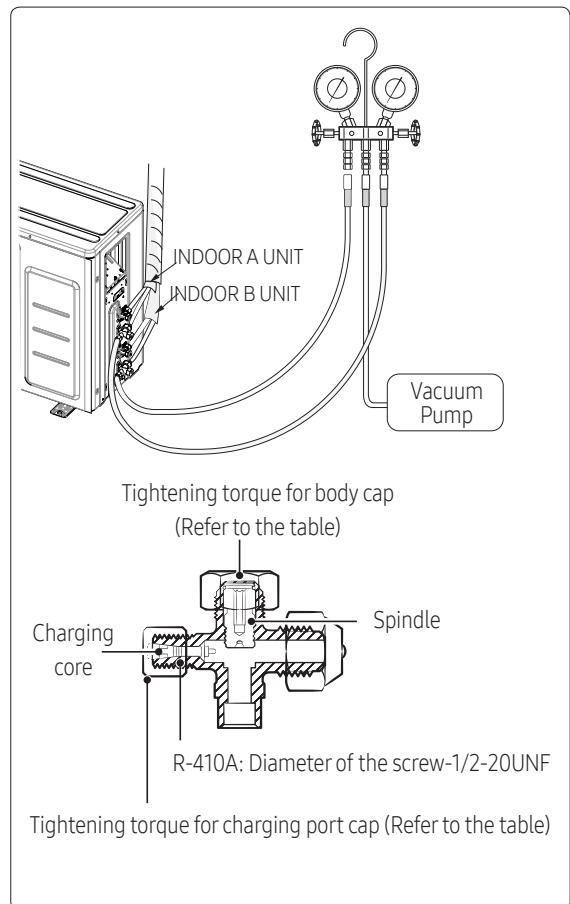

- Open the valve of the low pressure side of manifold gauge counter clockwise.
- Purge the air from the system using vacuum pump for about 30 minutes.
 - Close the valve of the low pressure side of manifold gauge clockwise.
 - Make sure that pressure gauge show -14.5 psi after about 30 minutes. This procedure is very important in order to avoid gas leak.
 - Turn off the vacuum pump.
 - Remove the hose of the low pressure side of manifold gauge.
- Set spindle of both liquid side and gas side of stop valve to the open position.
- Mount the valve stem nuts and the service port cap to the valve, and tighten them with a torque wrench.

Installation Procedure


| Outer Diameter (inch) | Tightening torque | |
|--------------------------|----------------------|-------------------------------|
| | Body cap (lbf·ft) | Charging port cap (lbf·ft) |
| Φ0.25 | 0.14 to 0.18 | |
| Φ0.37 | | 0.07 to 0.09 |
| Φ0.50 | 0.18 to 0.22 | |
| Φ0.63 | 0.22 to 0.25 | |

※ The designs and shape are subject to change according to the model.

Step 9 Performing the gas leak test

Before completing the installation (insulation of the cables, hose and piping and fixing of the indoor unit to the installation plate), you must check that there are no gas leaks.

| | |
|----------------------------------|--|
| To check for gas leaks on the... | Then, using a leak detector, check the ... |
| Outdoor unit | Valves on sections A and B. |
| Indoor unit | Flare nuts at the end of sections C and D. |

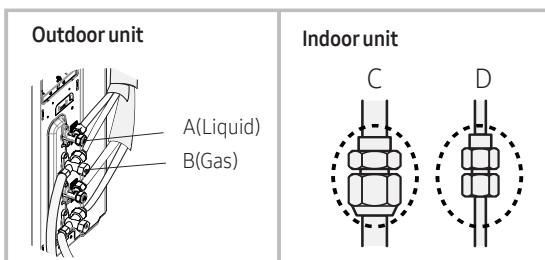

• The designs and shape are subject to change according to the model.

LEAK TEST WITH NITROGEN (before opening valves)

In order to detect basic refrigerant leaks, before recreating the vacuum and recirculating the R-410A, it is the responsibility of the installer to pressurize the whole system with nitrogen (using a cylinder with pressure reducer) at a pressure above 580.2 psi (gauge).

LEAK TEST WITH R-410A (after opening valves)

Before opening valves, discharge all the nitrogen into the system and create vacuum. After opening valves check leaks using a leak detector for refrigerant R-410A.

Once you have completed all the connections, check for possible leaks using leak detector specifically designed for HFC refrigerants.

Step 10 Adding refrigerant (R-410A)

Calculating the quantity of refrigerant to add

The quantity of additional refrigerant is variable according to the installation situation. Thus, make sure the outdoor unit situation before adding refrigerant.


If you install the excessive length of pipe, add additional refrigerant as 0.11 oz per unit ft ; refer to the table below. Refer to the Service Manual for more details on this operation.

| Model Name | Total connecting pipe length (L) | Adding refrigerant | |
|-------------|----------------------------------|--------------------|-------------------------|
| AJ020TXJ2CH | (LT) ft | ≤ 98.4 ft | Chargeless |
| | | ≥ 98.4 ft | (LT-98.4) ft x 0.11 oz |
| AJ024TXJ3CH | (LT) ft | ≤ 131.2 ft | Chargeless |
| | | ≥ 131.2 ft | (LT-131.2) ft x 0.11 oz |

Charging the refrigerant under conditions of liquid by using a liquid pipe

R-410A is a mixed type of refrigerant. It is necessary for recharging under conditions of liquid. When recharging refrigerant from the refrigerant cylinder to the equipment, follow the instructions below.

- Before recharging, check whether the cylinder has a siphon or not. There are two ways to recharge the refrigerant.

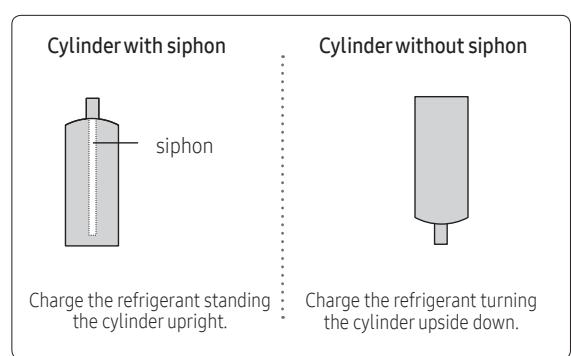

NOTE


- If R-410A refrigerant is charged with gas, the composition of the charged refrigerant changes and the characteristics of the equipment vary.
- During the measuring operation of refrigerant quantity added use an electronic balance. If cylinder doesn't have syphon, upset it.

Step 11 Connecting the drain hose to the outdoor unit

When heating, ice may accumulate. During the process of defrosting, check if condensation draining is adequate.

For adequate draining, do the following :

- 1 Insert the drain plug into the drain hole on the underside of the outdoor unit.
- 2 Connect the drain hose to the drain plug.
- 3 Ensure that condensation draining is adequate.

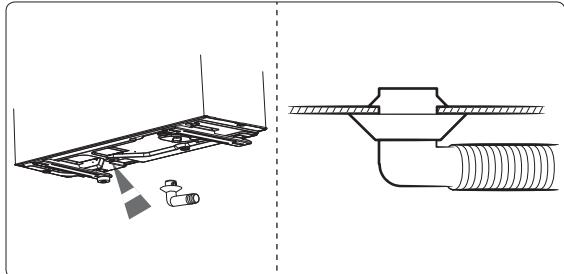


Step 12 Checking the earthing

If the power distribution circuit does not have a earthing or the earthing does not comply with specifications, an earthing electrode must be installed. The corresponding accessories are not supplied with the air conditioner.

- 1 Select an earthing electrode that complies with the specifications given in the illustration.
- 2 Connect the flexible hose to the flexible hose port.
 - In damp hard soil rather than loose sandy or gravel soil that has a higher earthing resistance.
 - Away from underground structures or facilities, such as gas pipes, water pipes, telephone lines and underground cables.
 - At least 6.56 ft away from a lightening conductor earthing electrode and its cable.

NOTE

- The earthing wire for the telephone line cannot be used to ground the air conditioner.

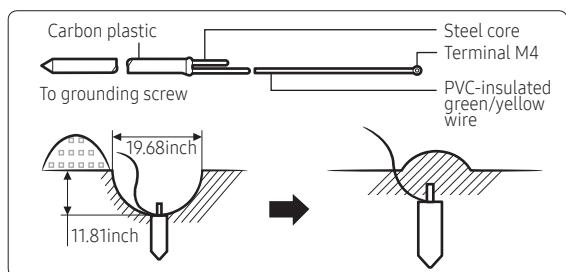

- 3 Finish wrapping insulating tape around the rest of the pipes leading to the outdoor unit.
- 4 Install a green/yellow colored earthing wire:
 - If the earthing wire is too short, connect an extension lead in a mechanical way and wrap it with insulating tape (do not bury the connection).
 - Secure the earthing wire in position with staples.

NOTE

- If the earthing electrode is installed in an area with heavy traffic, its wire must be connected securely.
- 5 Carefully check the installation by measuring the earthing resistance with a earth resistance tester. If the resistance is above the required level, drive the electrode deeper into the ground or increase the number of earthing electrodes.
- 6 Connect the earthing wire to the electrical component box inside of the outdoor unit.

Installation Procedure

Step 13 Setting an indoor unit address and installation option

Setting the indoor unit addresses manually

- 1 Review all the following elements in the installation:
 - Installation site strength
 - Piping connection tightness to detect any gas leakage
 - Connection wiring
 - Heat-resistant insulation of the piping
 - Drainage
 - Earthing wire connection
- 2 Manually set options in each room's the indoor unit by referring to page 23~28.
- 3 Press the K3 button once or reset the outdoor unit.

NOTE

- The Display 1/2 indications are the same as in the automatic address setting mode.

Setting of Key and Display of the outdoor unit

- Key option of the outdoor unit
 - K1: Fuction button - K3: Reset button


| Key Push | K1 | K3 |
|----------|-------------------------|-------|
| 1 | Pipe Checking Operation | Reset |
| 2 | Cool Mode Try run | |
| 3 | Heat Mode Try run | |
| 4 | Pump Down | |
| 5 | Finish Key Operation | |

※ For more information of the Cool or Heat Try run test, refer to page 28.

- K4 View mode Display changes


| Push | Display Explanation | Push | Display Explanation |
|------|--|------|--|
| 1 | Present Compressor Frequency | 9 | Discharge temperature |
| 2 | Target Compressor Frequency | 10 | OLP temperature |
| 3 | EEVO current step | 11 | Condenser temperature |
| 4 | EEV1 current step | 12 | Outdoor temperature |
| 5 | EEV2 current step | 13 | Running current |
| 6 | EEV3 current step | 14 | Target Discharge temperature |
| 7 | EEV4 current step | 15 | Total capacity of the indoor units |
| 8 | Fan RPM (H: high, L: low, Blank: off) | 16 | Safety Control (just For Service Technician) |

PCB MAIN - OUT

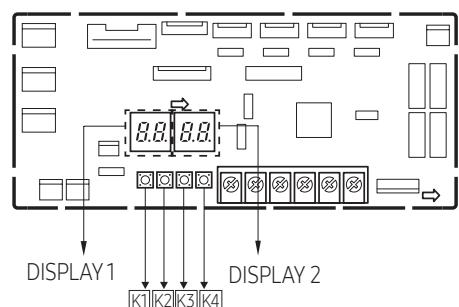


Setting the outdoor option

 - Press and hold K2 to enter the option setting.
(Only available when the operation is stopped)
 - If you enter the option setting, display will show the following.




- Seg 1 and Seg 2 will display the number for selected option.
- Seg 3 and Seg 4 will display the number for set value of the selected option.
- If you have selected desired option, you can shortly press the K1 switch to adjust the value of the Seg 1, Seg 2 and change the function for the selected option.

Example)

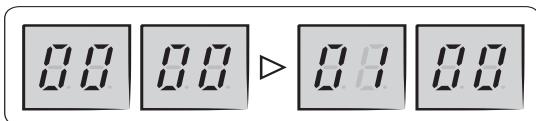

- If you have selected desired option, you can shortly press the K2 switch to adjust the value of the Seg 3, Seg 4 and change the function for the selected option.

 Example)



- After selecting the function for options, press and hold the K2 switch for 2 seconds. Edited value of the option will be saved when entire segments blinks and tracking mode begins.


| Option item | Input unit | SEG1 | SEG2 | SEG3 | SEG4 | Function |
|-----------------------------------|------------|------|------|---------|------|---------------------------------------|
| Setting to Cool or Heat only mode | Main | 0 | 0 | 0 | 0 | Cooling and Heating (Factory default) |
| | | | | 0 | 1 | Only Cooling |
| | | | | 0 | 2 | Only Heating |
| Power improvement mode | Main | 0 | 1 | 0 | 0 | Disabled (Factory default) |
| | | | | 0 | 1 | Enabled |
| Mixed mode indoor input | Main | 0 | 2 | 0 | 0 | Disabled (Factory default) |
| | | | | 0 | 1 | Enabled |
| Auto Change Over | Main | 0 | 3 | 0 | 0 | Disabled (Factory default) |
| | | | | 0 | 1 | Enabled (Factory default) |
| Channel address | Main | 0 | 4 | A | U | Automatic setting (Factory default) |
| | | | | 00 ~ 15 | | Manual setting |

⚠ CAUTION

- Edited option will not be saved if you do not end the option setting as explained in above instruction.
- While you are setting the option, you may press and hold the K1 button to reset the value to previous setting.
- If you want to restore the setting to factory default, press and hold the K4 button while you are in the option setting mode.
 - If you press and hold the K4 button, setting will be restored to factory default but it doesn't mean that restored setting is saved. Press and hold the K2 button. When the segments shows that tracking mode is in progress, setting will be saved.


Installation Procedure

Setting Option

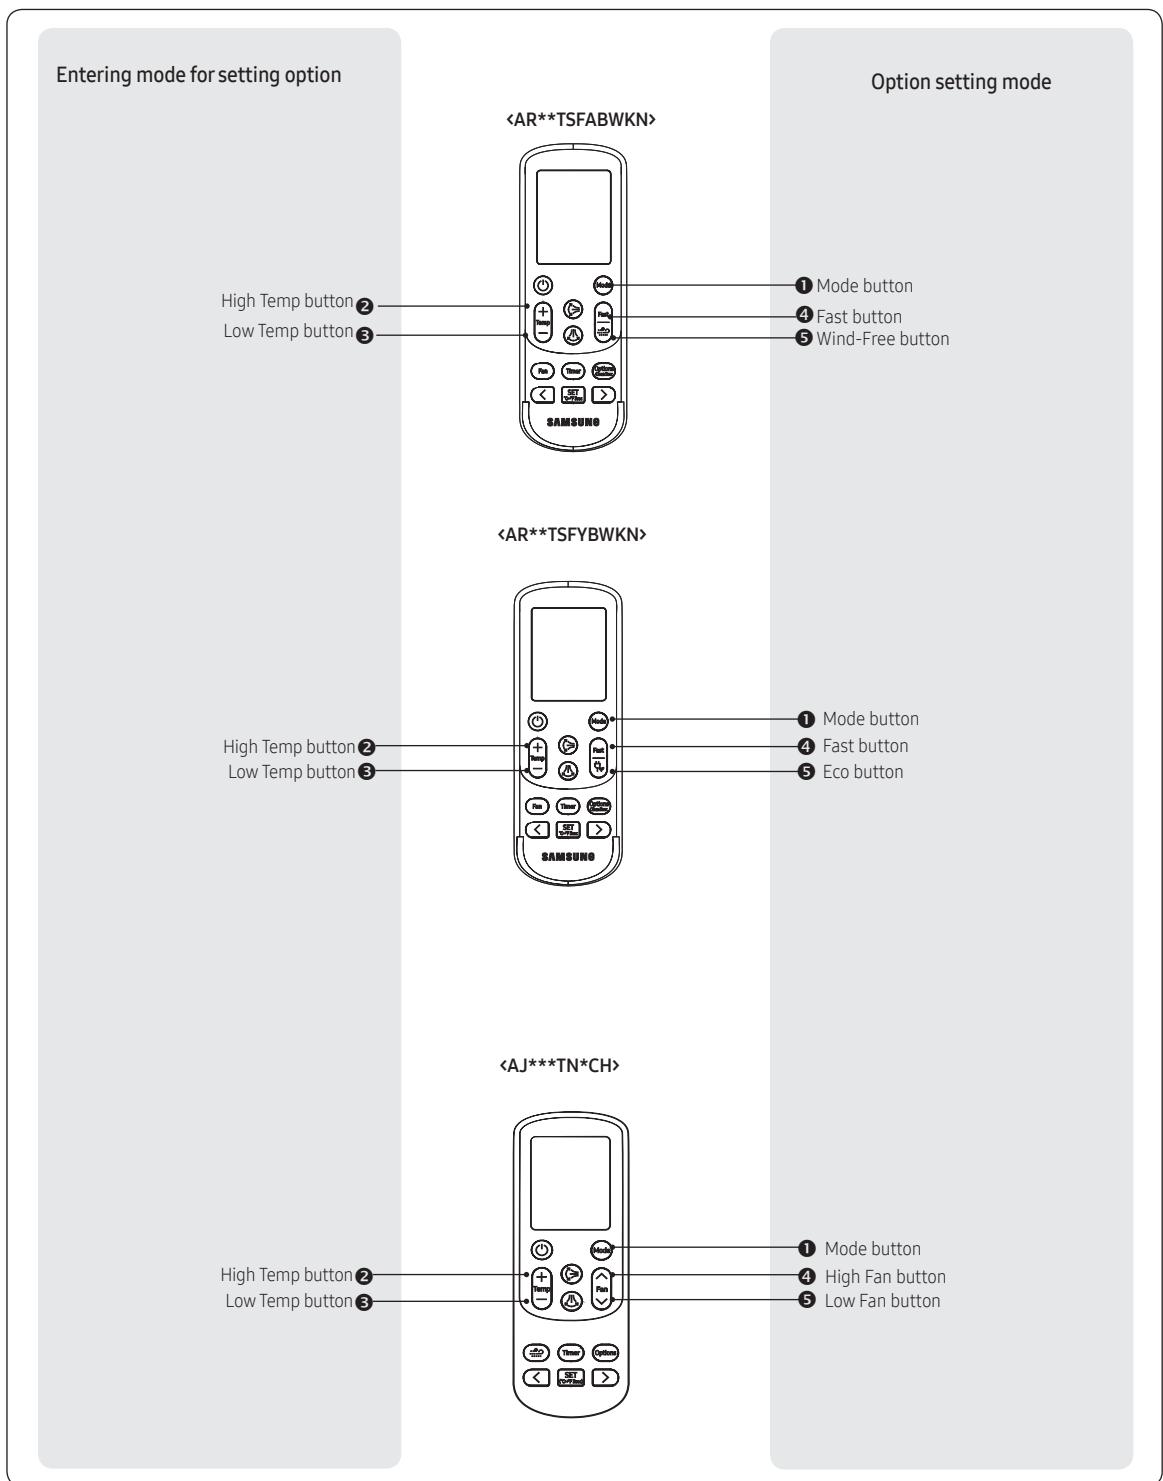

Setting Option

- 1 Remove batteries from the remote controller
- 2 Insert batteries and enter the option setting mode while pressing ② button and ③ button.
- 3 Each time you press ③ button, 7-seg on left side is increased by "1" and each time you press ④ button, 7-seg on right side is increased by "1"
- 4 You press ① button to move to the next setting page.
- 5 After setting option, press ① button to check whether the option code you input is correct or not.

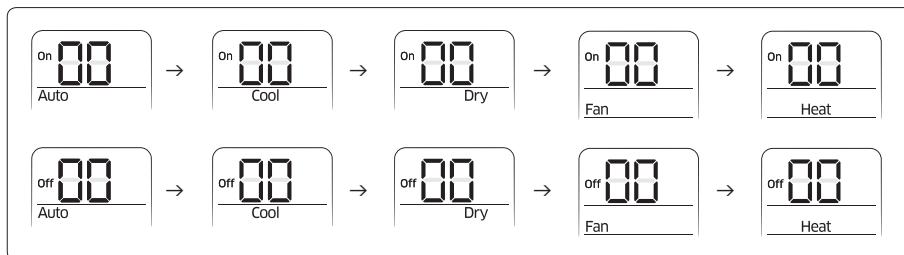

- 6 Press operation button with the direction of remote control for set.


⚠ CAUTION

- SEG1, SEG7, SEG13, SEG19 are not set as page option.
- Set the SEG1, SEG7 as ON status and SEG13, SEG19 as OFF status.
 - Set the each option separately since you cannot set the ADDRESS setting and indoor unit installation setting option at the same time.

The procedure of setting option

| Operation | Indication |
|--|------------|
| Step1 1 Remove the batteries from the remote controller. 2 Insert batteries while pressing ② Button and ③ Button. | |
| Step2 1 Press ⑤ button to enter SEG2 value. 2 Press ④ button to enter SEG3 value. | |
| Step3 Press ① button to be change to Cool mode in the ON status. 1 Press ⑤ button to enter SEG4 value. 2 Press ④ button to enter SEG5 value. | |

 Installation Procedure

| Operation | Indication |
|---|---|
| Step 4 Press ① button to be changed to DRY mode in the ON status. 1 Press ⑤ button to enter SEG6. 2 Press ④ button to enter SEG8. |  |
| Step 5 Press ① button to be changed to FAN mode in the ON status. 1 Press ⑤ button to enter SEG9 value. 2 Press ④ button to enter SEG10 value. |  |
| Step 6 Press ① button to be changed to HEAT mode in the ON status. 1 Press ⑤ button to enter SEG11 value. 2 Press ④ button to enter SEG12 value |  |
| Step 7 Press ① button to be changed to AUTO mode in the OFF status. 1 Press ⑤ button to enter SEG14 value. 2 Press ④ button to enter SEG15 value. |  |
| Step 8 Press ① button to be changed to Cool mode in the OFF status. 1 Press ⑤ button to enter SEG16 value. 2 Press ④ button to enter SEG17 value. |  |
| Step 9 Press ① button to be changed to DRY mode in the OFF status. 1 Press ⑤ button to enter SEG18 value. 2 Press ④ button to enter SEG20 value. |  |
| Step 10 Press ① button to be changed to FAN mode in OFF status 1 Press ⑤ button to enter SEG21 value. 2 Press ④ button to enter SEG22 value. |  |
| Step 11 Press ① button to be changed to HEAT mode in the OFF status 1 Press ⑤ button to enter SEG23 value. 2 Press ④ button to enter SEG24 value. |  |
| Step 12 Press ① button to check whether the option code you entered is correct or not. Press operation button  to enter option. | |

Setting the indoor unit addresses automatically

NOTE


- For the best results, make sure that electrical wiring is done properly.
- For the best results, set the outdoor temperature to 41 to 104°F (*) and set the indoor temperature to 60.8°F or higher (*).

※ (*) Auto addressing may fail when the temperature is out of the range above. In this case, set the address manually.

CAUTION

- This product is prohibited one indoor unit installation. Don't use pipe checking operation and auto addressing mode when one indoor unit is installed.

PCB MAIN - OUT

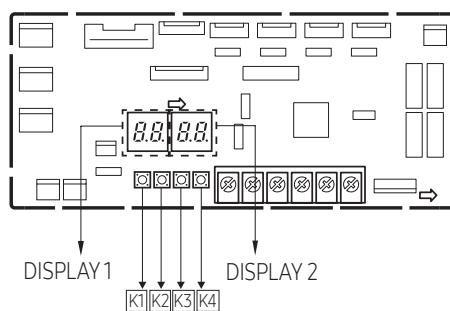

- 1 Turn on the outdoor unit, and then check whether the display 1/2 indications are displayed "E199" code.

※ During the initial, display 1 shows "Ad" and display 2 shows the connected indoor number.

- If different display code is shown, see Troubleshooting on page 39 and take corrective actions.

- 2 Push once the K1 button.
- 3 After the operations described above have been performed, the system starts in Cooling or Heating mode, depending on the external ambient temperature. After a few minutes (from a minimum of 3 to 5 minutes for the internal unit), the system stops automatically, completing the self-test and addressing procedure.

- 4 "Isot" appears on the display of the outdoor unit.

4. 20 seconds after the display of "Isot" (that confirms the correct execution of the procedure), the following codes (if four internal units are connected) display in sequence on the display of the outdoor unit:

| Display1 | Display2 | Description |
|----------|----------|---|
| 00 | 00 | The outdoor unit is communicating correctly with the indoor unit connected to refrigerant pipe A. |
| 01 | 00 | The outdoor unit is communicating correctly with the indoor unit connected to refrigerant pipe B. |
| 02 | 00 | The outdoor unit is communicating correctly with the indoor unit connected to refrigerant pipe C. |
| 03 | 00 | The outdoor unit is communicating correctly with the indoor unit connected to refrigerant pipe D. |
| 04 | 00 | The outdoor unit is communicating correctly with the indoor unit connected to refrigerant pipe E. |

NOTE


- At this point it is possible to start the internal units in the desired mode.

※ If "Isot" doesn't display, the procedure has failed and it is therefore necessary to read ALL the operator's manual before repeating the operating described in steps 1-2-3-4.

Installation Procedure

Setting an indoor unit address (MAIN/RMC)

- 1 Check whether power is supplied or not.
 - When the indoor unit is not plugged in, there should be additional power supply in the indoor unit.

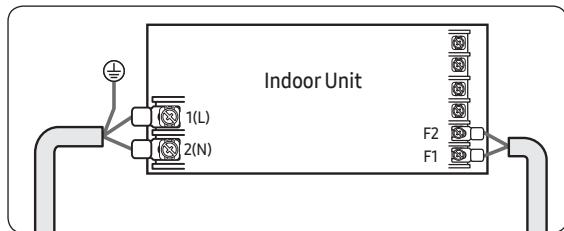

- 2 The panel(display) should be connected to an indoor unit to receive option.
- 3 Before installing the indoor unit, assign an address to the indoor unit according to the air conditioning system plan.
- 4 Assign an indoor unit address by wireless remote controller.
 - The initial setting status of indoor unit ADDRESS(MAIN/RMC) is "0A0000-100000-200000-300000"
 - There is no need to assign extra ADDRESS for 1:1 installation between indoor unit and outdoor unit.

Option No. : 0AXXXX-1XXXXX-2XXXXX-3XXXXX

| Option | SEG1 | | SEG2 | | SEG3 | | SEG4 | | SEG5 | | SEG6 | | | | |
|------------------------|------------|---------|------------|---------|----------------------|---------------------------|----------------------------------|-----------|-------------------------|----------|-------------------------------|----------------|--|--|--|
| Explanation | Page | | Mode | | Setting main address | | 100-digit of indoor unit address | | 10-digit of indoor unit | | A single digit of indoor unit | | | | |
| Indication and details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | | | |
| | 0 | | A | | 0 | No Main address | 0~9 | 100-digit | 0~9 | 10-digit | 0~9 | A single digit | | | |
| | 1 | | | | 1 | Main address setting mode | | | | | | | | | |
| Option | SEG7 | | SEG8 | | SEG9 | | SEG10 | | SEG11 | | SEG12 | | | | |
| Explanation | PAGE | | | | Setting RMC address | | | | Group channel(*16) | | Group address | | | | |
| Indication and Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | | | |
| | 1 | | | | 0 | No RMC address | RMCI | 1~F | RMCI | 1~F | RMCI | 1~F | | | |
| | | | | | 1 | RMC address setting mode | | | | | | | | | |


* You must set RMC address setting mode when using the centralized Control.

CAUTION

- When "A"~"F" is entered to SEG4~6, the indoor unit MAIN ADDRESS is not changed.
- If you set the SEG 3 as 0, the indoor unit will maintain the previous MAIN ADDRESS even if you input the option value of SEG4~6.
- If you set the SEG 9 as 0, the indoor unit will maintain previous RMC ADDRESS even if you input the option value of SEG11~12.
- 5 The MAIN address is for communication between the indoor unit and the outdoor unit. Therefore, you must set it to operate the air conditioner properly

Setting an indoor unit installation option (suitable for the condition of each installation location)

- 1 Check whether power is supplied or not.
 - When the indoor unit is not plugged in, there should be additional power supply in the indoor unit.

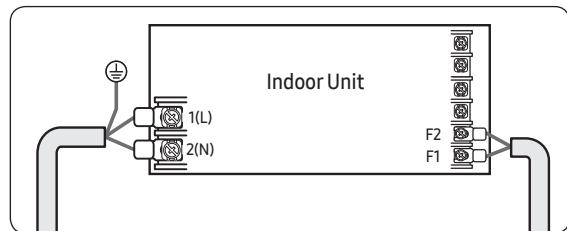

- 2 The panel(display) should be connected to an indoor unit to receive option.
- 3 Before installing the indoor unit, assign an option to the indoor unit according to the air conditioning system plan.
 - The default setting of an indoor unit installation option is "02000-100000-200000-300000".
 - Individual control of a remote controller(SEG20) is the function that controls an indoor unit individually when there is more than one indoor unit.
- 4 Set the indoor unit option by wireless remote controller.
 - When entering Address option, connect remote controller receiver.

| Option | SEG1 | | SEG2 | | SEG3 | | SEG4 | | SEG5 | | SEG6 | | | | | |
|------------------------|------------|---------|-------------------------|---------|-------------------------|--------------|------------|---------|-----------------|---------|------------|---------|--|--|--|--|
| Explanation | PAGE | | MODE | | | | | | Central control | | | | | | | |
| Indication and Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | | | | |
| | 0 | | 2 | | 0 | | 0 | | 0 | No use | 0 | | | | | |
| Option | SEG7 | | SEG8 | | SEG9 | | SEG10 | | SEG11 | | SEG12 | | | | | |
| Explanation | PAGE | | | | | | | | Master / Slave | | | | | | | |
| Indication and Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | | | | |
| | 1 | | 0 | | 0 | | 0 | | 0 | | 0 | Slave | | | | |
| Option | SEG13 | | SEG14 | | SEG15 | | SEG16 | | SEG17 | | SEG18 | | | | | |
| Explanation | PAGE | | External control | | External control output | | | | Buzzer | | | | | | | |
| Indication and Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | | | | |
| | 0 | | No use | | 0 | Thermo ON | 0 | 0 | 0 | Use | 0 | | | | | |
| | 1 | | On/Off control | | | | | | 1 | No Use | | | | | | |
| | 2 | | Off control | | 1 | Operation ON | | | | | | | | | | |
| | 3 | | Window On/Off control1) | | | | | | | | | | | | | |
| Option | SEG19 | | SEG20 | | SEG21 | | SEG22 | | SEG23 | | SEG24 | | | | | |
| Explanation | PAGE | | | | | | | | | | | | | | | |
| Indication and Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | | | | |
| | 3 | | 0 | | 0 | | 0 | | 0 | | 0 | | | | | |

* If you input a number other than 0~4 of the individual control of the indoor unit(SEG20), the indoor is set as "indoor1".

- The window on/off function applies to the following unit
 - AR*****

Installation Procedure

Step 14 Cool and Heat modes operation test

After installing the outdoor and indoor units, test the **Cool** and **Heat** modes.

- When you test the **Cool** mode, set the set temperature of the indoor unit to the lowest one. And when you test the **Heat** mode, set the set temperature of the indoor unit to the highest one.
- Check if each indoor unit operates normally and then also check if all indoor units operate normally together.
 - Check both of the Cool and Heat modes.
- About 20 minutes after the air conditioner is started, check the temperature difference between the air inlet and outlet of the indoor unit. If the temperature difference is larger than the value given in the following table, the operation is normal.

| Mode | Temperature |
|------|-----------------------|
| Cool | Approximately 14.4 °F |
| Heat | Approximately 21.6 °F |

⚠ CAUTION

- If the outdoor unit is turned off and then immediately turned on again, the compressor does not operate for about 3 minutes.
- During the Cool mode, frost may temporarily develop on valves and other parts.

▣ NOTE

- You can also test the Cool or Heat Try run using K1 button.
 - Cool mode try-run : Push the [K1] button twice.
 - Heat mode try-run : Push the [K1] button three times.

Step 15 Optional: Setting to Cool or Heat only mode

This function enables the indoor units connected to the outdoor unit to operate in a specific mode.

You can set each mode with Keys on the Main PCB in the outdoor unit.

| Set mode | SEG1 | SEG2 | SEG3 | SEG4 |
|---------------------|------|------|------|------|
| Cooling and Heating | | | 0 | 0 |
| Only Cooling | 0 | 0 | 0 | 1 |
| Only Heating | | | 0 | 2 |

- Default value: Cooling and Heating mode

Step 16 Optional: Power improvement mode

The power improvement mode has the following power reduction effects.

- Reduced power at Thermo off
 - When the air conditioner operates in **Cool**, **Dry** and **Auto** mode, if Thermo off is reached during cooling, the fan and display of the indoor unit are turned off after 5 minutes.
 - When you operates the remote control, the indoor unit display turns on again.
- Standby mode operation
 - When all indoor units are turned off, the air conditioner recognizes it and enters the standby mode.
 - The product power consumption in the standby mode is 3.5 W or less.

Setting the power improvement mode

Enable or disable the power improvement mode with Keys on the Main PCB in the outdoor unit.

| Power improvement mode | SEG1 | SEG2 | SEG3 | SEG4 |
|------------------------|------|------|------|------|
| Disabled | | | 0 | 0 |
| Enabled | 0 | 1 | 0 | 1 |

- Default value: Disabled

NOTE

- This function is available only when the following indoor unit is connected and the function is enabled.
 - AR*****

Extra Procedures

Pumping down refrigerant


⚠️ WARNING

- After installing the product, be sure to perform leak tests on the piping connections. After pumping down refrigerant to inspect or relocate the outdoor unit, be sure to stop the compressor and then remove the connected pipes.
 - Do not operate the compressor while a valve is open due to refrigerant leakage from a pipe or an unconnected or incorrectly connected pipe. Failure to do so may cause air to flow into the compressor and too a high pressure to develop inside the refrigerant circuit, leading to an explosion or product malfunction.

Pump-down is an operation intended to collect all the system refrigerant in the outdoor unit.

This operation must be carried out before disconnecting the refrigerant pipe in order to avoid refrigerant loss to the atmosphere.

- Turn the system on in cooling with fan operating at high velocity and then let the compressor run for more than 5 minutes. (Compressor will immediately start, provided 3 minutes have elapsed since the last stop.)
- Release the valve caps on High and Low pressure side.
- Use L-wrench to close the valve on the high pressure side.
- After approximately 2 minute, close the valve on the low pressure side.
- Stop operation of the air conditioner by pressing the (Power) button on the indoor unit or remote control.
- Disconnect the pipes.

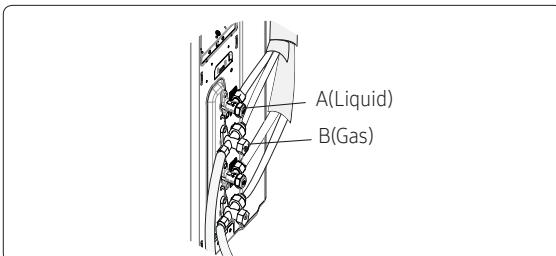


Relocating the indoor and outdoor units

- Pump down refrigerant. See **Pumping down refrigerant** on page 30.
- Remove the power cord.
- Disconnect the assembly cable from the indoor and outdoor units.
- Remove the flare nuts connecting the indoor units and the pipes. At this time, cover the pipes of the indoor unit and the other pipes using a cap or vinyl plug to avoid foreign material entering.
- Disconnect the pipes connected to the outdoor units. At this time, cover the valve of the outdoor units and the other pipes using a cap or vinyl plug to avoid foreign material entering.
Note: Make sure you do not bend the connection pipes in the middle and store together with the cables.
- Move the indoor and outdoor units to a new location.
- Remove the mounting plate for the indoor unit and move it to a new location.

Using the stop valve

Opening the stop valve

- Open the cap and turn the stop valve anticlockwise by using a hexagonal wrench.
- Turn it until the axis is stopped.

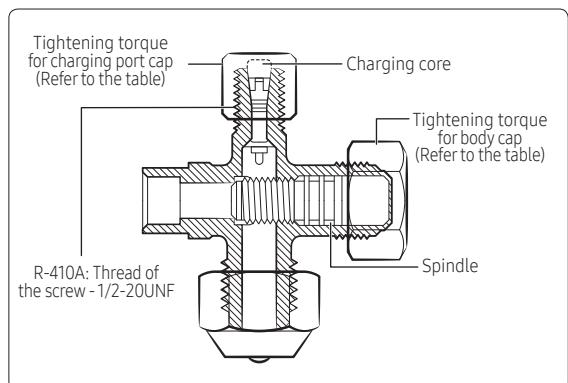

1 Tighten the cap securely.

| Outer Diameter (inch) | Tightening torque | |
|--------------------------|----------------------|-------------------------------|
| | Body cap (lbf·ft) | Charging port cap (lbf·ft) |
| Φ0.25 | 0.14 to 0.18 | |
| Φ0.37 | | 0.07 to 0.09 |
| Φ0.50 | 0.18 to 0.22 | |
| Φ0.63 | 0.22 to 0.25 | |

NOTE

- Do not apply excessive force to the stop valve and always use special instruments. Otherwise, the stopping box can be damaged and the back sheet can leak.
- If the watertight sheet leaks, turn the axis back by half, tighten the stopping box, then check the leakage again. If there is no leakage any more, tighten the axis entirely.

Closing the stop valve

- 1 Remove the cap.
- 2 Turn the stop valve clockwise by using a hexagonal wrench.
- 3 Tighten the axis until the valve reached the sealing point.
- 4 Tighten the cap securely.

CAUTION

- When you use the service port, always use a charging hose, too.
- Check the leakage of refrigerant gas after tightening the cap.
- Must use a spanner and wrench when you open/tighten the stop valve.


Appendix

Troubleshooting

The table below list the self-diagnostic routines. For some of error, you must contact an authorized service center.

If an error occurs during the operation, it is displayed on the outdoor unit PCB MAIN-OUT.

PCB MAIN - OUT

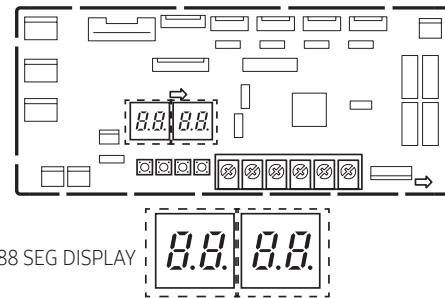

| Error Code | Explanation | Remark |
|------------|--|--------|
| E108 | ERROR DUE TO REPEATED ADDRESS SETTING(WHEN 2 OR MORE DEVICES HAS THE SAME ADDRESS WITHIN THE NETWORK) | |
| E190 | PIPE CHECK ERROR | |
| E199 | PIPE CHECK OPERATION HAS NOT BEEN COMPLETED | |
| E201 | COMMUNICATION ERROR BETWEEN INDOOR AND OUTDOOR UNIT(INSTALLATION NUMBER SETTING ERROR, REPEATED INDOOR UNIT ADDRESS, INDOOR UNIT COMM) | |
| E202 | COMMUNICATION ERROR BETWEEN INDOOR AND OUTDOOR UNIT(COMMUNICATION ERROR ON ALL INDOOR UNITS, OUTDOOR UNIT COMMUNICATION CABLE ERROR) | |
| E203 | COMMUNICATION ERROR BETWEEN INVERTER PBA AND MAIN PBA | |
| E221 | ERROR ON AMBIENT TEMPERATURE SENSOR (SHORT OR OPEN) | |
| E237 | ERROR ON CONDENSOR TEMPERATURE SENSOR(SHORT OR OPEN) | |
| E251 | ERROR ON DISCHARGE TEMPERATURE SENSOR(SHORT OR OPEN) | |
| E320 | ERROR ON COMPRESSOR OLP TEMPERATURE SENSOR(SHORT OR OPEN) | |
| E330 | ERROR ON PIPE IN-A TEMPERATURE SENSOR(SHORT OR OPEN) | |
| E331 | ERROR ON PIPE IN-B TEMPERATURE SENSOR(SHORT OR OPEN) | |
| E332 | ERROR ON PIPE IN-C TEMPERATURE SENSOR(SHORT OR OPEN) | |
| E333 | ERROR ON PIPE IN-D TEMPERATURE SENSOR(SHORT OR OPEN) | |
| E335 | ERROR ON PIPE OUT-A TEMPERATURE SENSOR(SHORT OR OPEN) | |
| E336 | ERROR ON PIPE OUT-B TEMPERATURE SENSOR(SHORT OR OPEN) | |
| E337 | ERROR ON PIPE OUT-C TEMPERATURE SENSOR(SHORT OR OPEN) | |
| E338 | ERROR ON PIPE OUT-D TEMPERATURE SENSOR(SHORT OR OPEN) | |
| E401 | OUTDOOR UNIT FREEZING-SAFETY CONTROL(COMPRESSOR STOP) | |
| E404 | OUTDOOR UNIT OVERLOAD-SAFETY CONTROL(COMPRESSOR STOP) | |
| E416 | COMPRESSOR OPERATION STOP DUE TO DISCHARGE TEMPERATURE PROTECTION CONTROL | |

| Error Code | Explanation | Remark |
|------------|--|--------|
| E422 | HIGH PRESSURE BLOCKAGE CONTROL | |
| E440 | HEATING MODE RESTRICTION DUE TO HIGH AIR TEMPERATURE | |
| E441 | COOLING MODE RESTRICTION DUE TO LOW AIR TEMPERATURE | |
| E458 | FAN MOTOR ERROR | |
| E461 | OPERATION FAILURE OF COMPRESSOR | |
| E462 | COMPRESSOR OPERATION STOP DUE TO FULL LOAD CURRENT CONTROL | |
| E463 | COMPRESSOR OPERATION STOP DUE TO OLP TEMPERATURE CONTROL | |
| E464 | ERROR DUE TO OVER-CURRENT OF COMPRESSOR | |
| E465 | VOLTAGE-LIMIT ERROR OF COMPRESSOR | |
| E466 | ERROR DUE TO LOW/OVER VOLTAGE OF DC LINK IN INVERTER PBA | |
| E467 | ABNORMAL RPM IN COMPRESSOR OR WIRE FOR COMPRESSOR HAS NOT BEEN CONNECTED | |
| E468 | ERROR DUE TO OUTPUT CURRENT SENSOR OF INVERTER PBA(SHORT/OPEN) | |
| E469 | ERROR DUE TO DC LINK VOLTAGE SENSOR OF INVERTER PBA(SHORT/OPEN) | |
| E470 | OUTDOOR UNIT EEPROM READ/WRITE ERROR | |
| E471 | OUTDOOR UNIT EEPROM READ/WRITE ERROR(OTP) | |
| E474 | ERROR ON IPM/PFCM TEMPERATURE SENSOR OF INVERTER PBA(SHORT OR OPEN) | |
| E483 | OVERVOLTAGE OF H/W DETECT DC LINK | |
| E484 | PFC OVERLOAD(OVER CURRENT) ERROR | |
| E485 | ERROR DUE TO INPUT CURRENT SENSOR OF INVERTER PBA(SHORT/OPEN) | |
| E488 | INCOMING VOLTAGE SENSOR ERROR | |
| E500 | IPM/PFCM OVERHEAT ERROR | |
| E554 | THE REFRIGERANT LEAKS COMPLETELY FROM THE OUTDOOR UNIT | |
| E563 | ERROR DUE TO INDOOR UNIT SOFTWARE VERSION COMBINATION(INCOMPATIBLE INDOOR UNIT SOFTWARE ON A SYSTEM) | |
| E590 | INVERTER EEPROM CHECKSUM ERROR | |

SAMSUNG